[1] 3956216 EMBLEM

MANDATORY INSTALLATION SEQUENCE

1. Clean body paint surface in area of emblem with wipe cloth soaked in Dupont "Prep-sol".
2. Dry paint surface with a clean wipe cloth.
3. Apply emblem to surface with a 10 pound load for a period of 15 seconds.

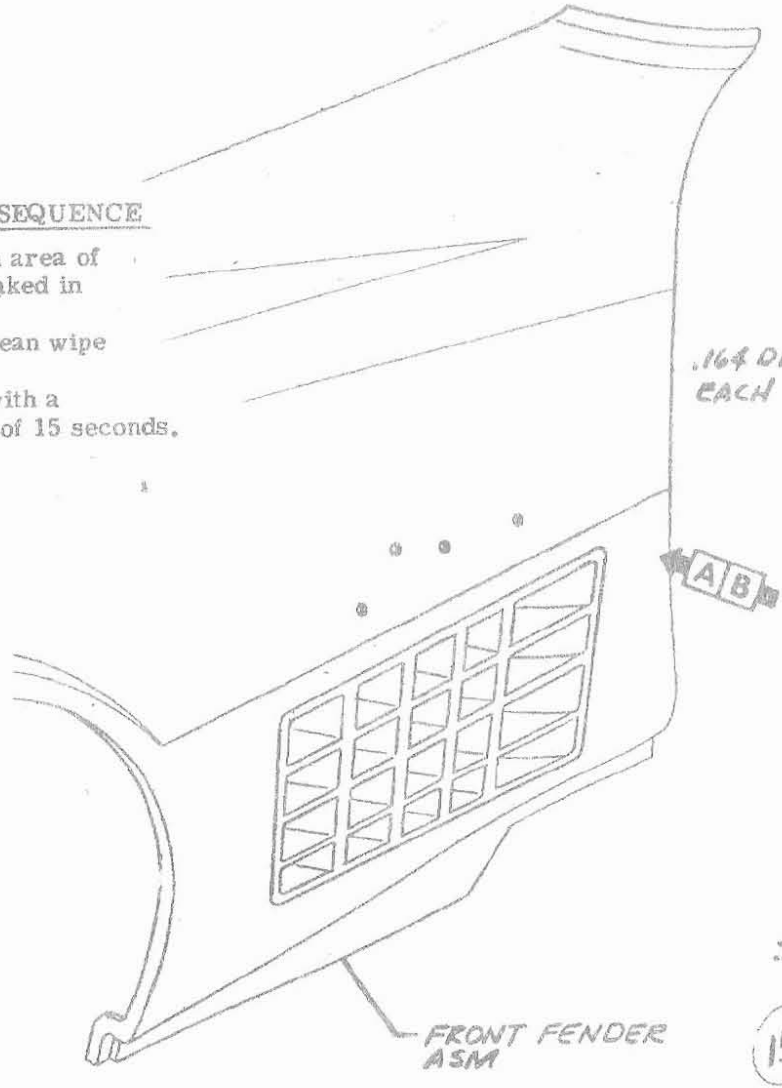

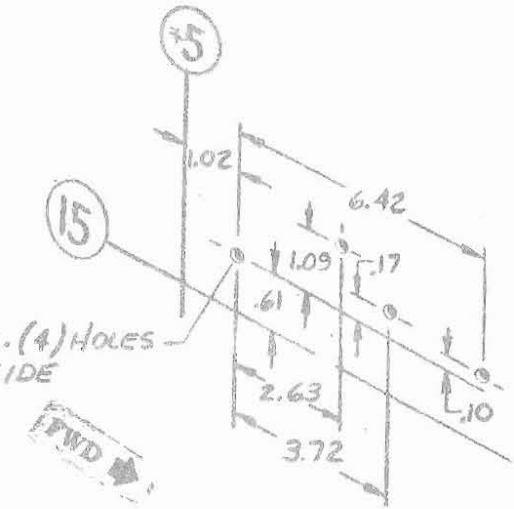

VIEW A R.H.

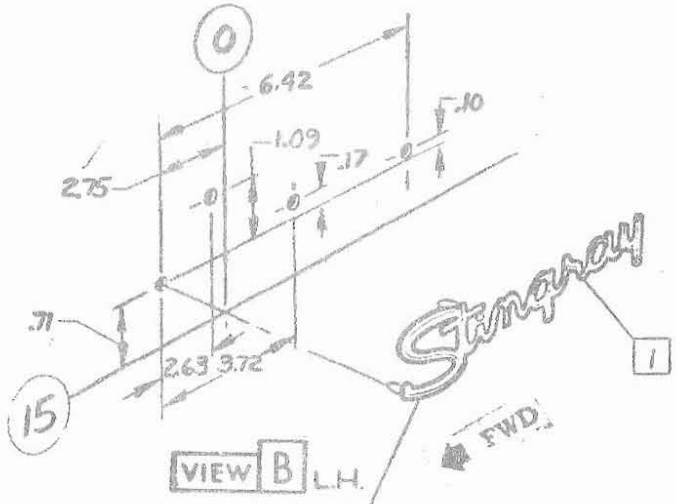

VIEW B L.H.

NOTE Remove paper backing.

DATE	SYM	REVISION RECORD	AUTH	DR	CK

1971 CORVETTE SERIES 3975762

L- 87976

DR LWS

CK 3-24-70 DP

3-20-70 C/O A9 ECR

TITLE: FRONT FENDER EMBLEM & PIERCING

UPC 11

MODEL 19000

SHEET A14

L239